

Scan one of the below barcodes to set the scanner for usb serial emulation only if instructed so by a Honeywell Scanning and Mobility Support Technician. Otherwise scan the appropriate usb serial emulation bar code from the scanner's configuration or user guide.



USB COM Port Emulation



TRMUSB130.

**USB Serial**



PAP130.

**USB Serial Emulation for  
Windows XP, Windows Server  
2003, and later**

---

## **USB HID**

Scan the following code to program the scanner for USB HID bar code scanners.



PAP131.

**USB HID Bar Code Scanner**

## **USB Serial**

Scan the following code to program the scanner to emulate a regular RS232-based COM Port. If you are using a Microsoft® Windows® PC, you will need to download a driver from the Honeywell website ([www.honeywellaidc.com](http://www.honeywellaidc.com)). The driver will use the next available COM Port number. Apple® Macintosh computers recognize the scanner as a USB CDC class device and automatically uses a class driver.



TRMUSB130.

**USB Serial**

*Note: No extra configuration (e.g., baud rate) is necessary.*

## **CTS/RTS Emulation**



USBCTS1.

**CTS/RTS Emulation On**



USBCTS0.

**\* CTS/RTS Emulation Off**

## **ACK/NAK Mode**



USBACK1.

**ACK/NAK Mode On**



USBACK0.

**\* ACK/NAK Mode Off**